



# Typical Connections

					DBW1	To ECU		From AC
Motor1-	5V	Pedal in		DBW1 in	TPS ecu	AC		
A8	A7	A6	A5	A4	A3	A2	A1	
Motor1+					X		GND	
B8	B7	B6	B5	B4	B3	B2	B1	
	X	Pedal2	DBW1 B	DBW2 in	DBW2 B	extra	12V	
C8	C7	C6	C5	C4	C3	C2	C1	

