


GLADIATOR QUICK GUIDE

Use Board Layout: UA4C

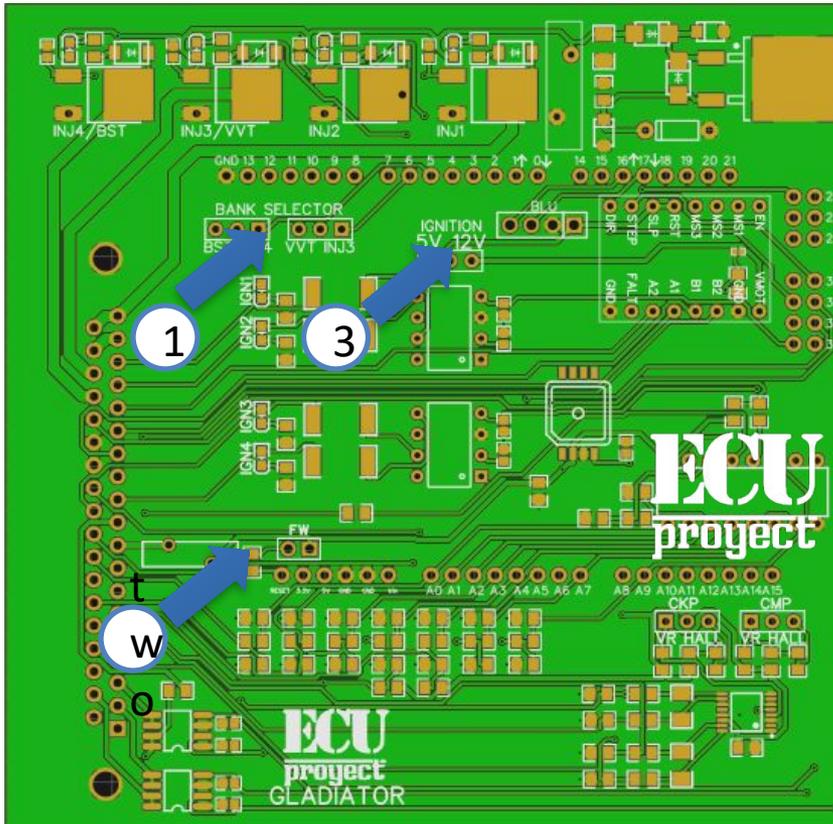

Jumpers (selectors)

- 1.- Selectors to choose between injection bank or special output
- 2.- Remove selector to burn firmware
- 3.- Selector to choose ignition outputs at 5V or 12V

The ECU comes in VR mode, to connect a hall sensor you just have to place a Pullup resistor!

- 12V.- power supply for ECU (normally to switch)
- GND.- ground, the ground is common for sensors, and other devices
- 5V.- 5V output for sensors (TPS, MAP)
- INJ1.- Bank 1 of injectors
- INJ2.- Bank 2 of injectors
- VVT/3.- Bank 3 of injectors / VVT outlet
- BS/4.- Bank 4 injectors / Boost output
- IGN1, IGN2, IGN3, IGN4.- Ignition banks 1,2,3 and 4
- FLX.- input for Flex Fuel sensor (ethanol content)
- IAT.- air intake temperature sensor
- CLT.- coolant temperature sensor
- TPS.- throttle body position sensor
- LNCH.- input to activate launch control (IT IS ACTIVATED WITH GND OF THE SAME ECU)
- O2.- input for oxygen sensor (wideband with controller or direct narrowband)
- O2_2.- input for second oxygen sensor, or configurable for another sensor
- BRO.- input for Barometric sensor (MAP of 1 bar)
- VR1+.- crankshaft sensor input or CKP type OPTICAL or HALL (add pullup) also configurable as VR positive pulse
- VR2+.- OPTICAL or HALL type tree or CAM sensor input also configurable as positive pulse VR
- VR1-.- is only used in case of configuring crankshaft sensor as VR type, this is the negative complementary pulse input
- VR2-.- it is only used in case of configuring tree sensor as VR type, this is the negative complementary pulse input
- FAN.- output for radiator fan (use with relay)
- FP.- output for fuel pump (use with relay)
- TACH.- tachometer output
- Out26.- programmable output available (use with relay)


INTEGRATED VR card

Optional 4bar internal map

GLADIATOR QUICK GUIDE

Gladiator

INJ1	INJ2	IGN1	IGN2	1B	1A	2A	2B	IGN4	12V	5V	IAT	TPS	VR1-	VR1+		OUT26	FAN	TACH
		Yellow /stripe	Orange /stripe					Yellow thick	Red	Orange	White	Purple	Black shielded	Red shielded		Green	Brown	Pink Gray
INJ1	INJ2	VVT/ INJ3	BST/ INJ4	FLX	GND	GND	O2_2	ING3	BRO	MAP	CLT	O2	VR2-	VR2+	LNCH	FP		
Brown Black	Red /stripe	Blue /stripe	Yellow	Blue Red	Black	Black		Blue thick	Gray	Brown /stipe	Brown thick	Pink	Blue shielded	Orange shielded	Red thick	Blue		

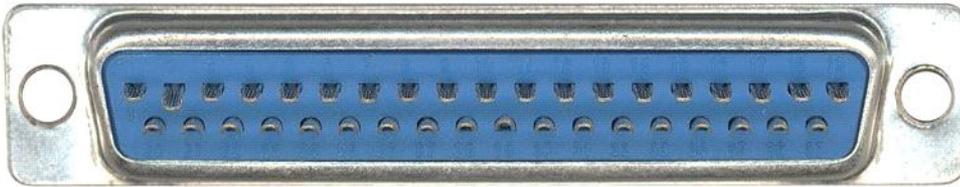

ECU project

www.facebook.com/ProjectECU/

WARNING

Do not save tunes or megasquirt files in this ECU, this ecu IS NOT MEGASQUIRT, it is not clone of megasquirt either. So saving an incompatible tune will cause the ecu not to synchronize time and failures will occur.

RECOMMENDATION:


Follow the Tutorial1 and the files from projectECU.com/en/descargas to connect to the ecu and do the Hardware test!

Do this before you install the ECU!

GLADIATOR QUICK GUIDE

How to assign extra inputs or outputs?

Some menus have something called “pin”, this is used to assign this function to another available output.

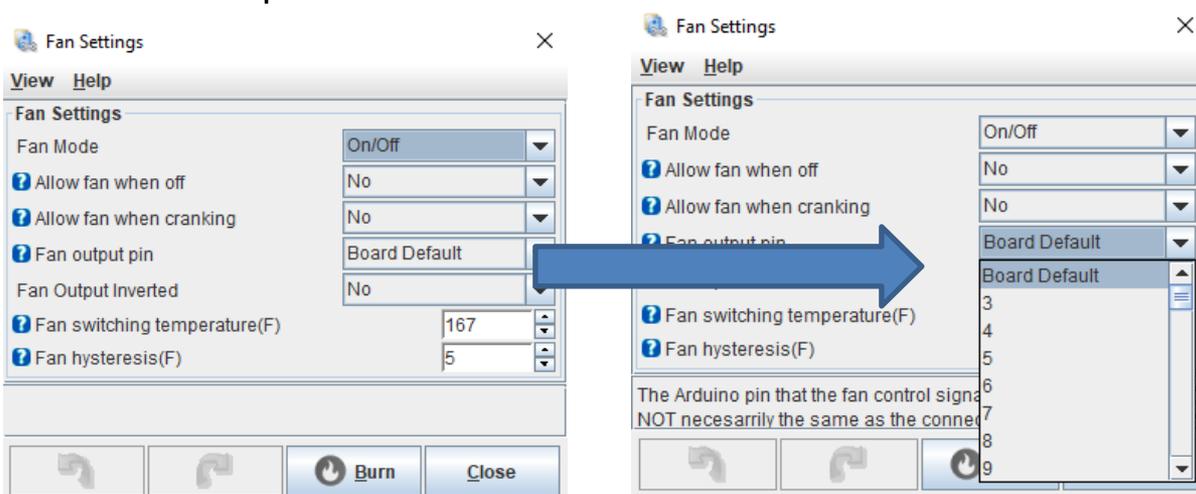


Use this table to find out which pin each reassignable output has.


Gladiator:

inputs	Baro.- A7
	O2.- A1
	O2_2.- A9
	Flex.- 20 (digital on/off)
	Launch.- 37 (digital on/off)
outputs	Out26.- 26
	BST.- 12 (shared output with injector)
	VVT.- 11 (shared output with injector)


MAPconnection

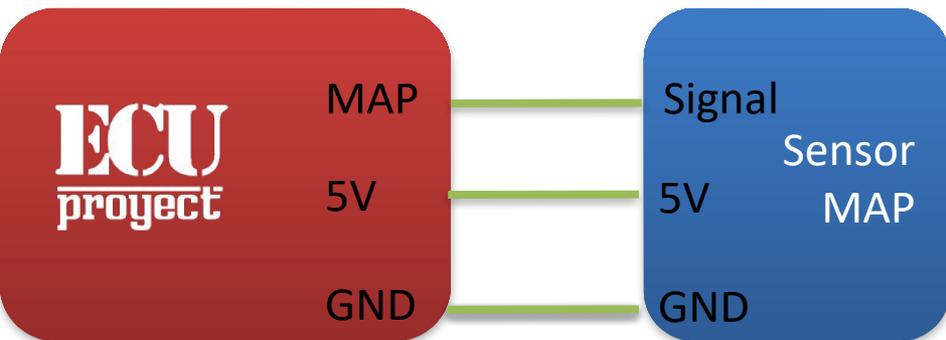


IAT or CLT connection

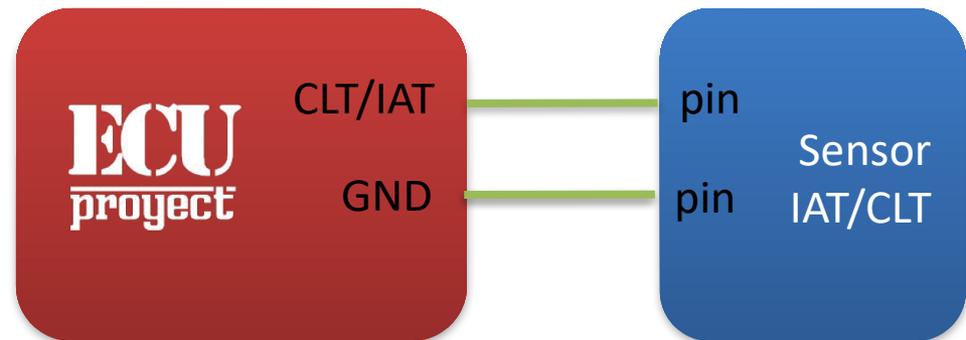


TPS connection

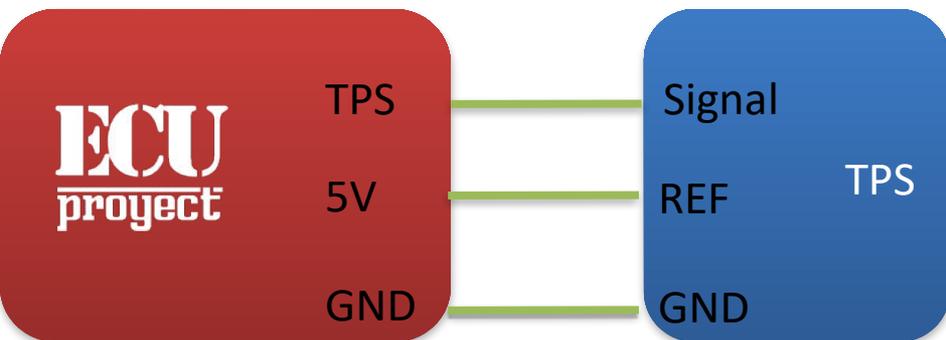


Launch Control Connection

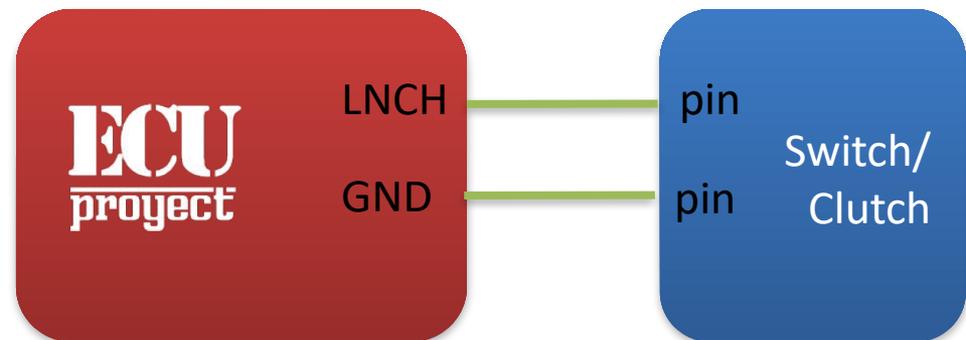

Ignition Connection (Coil)

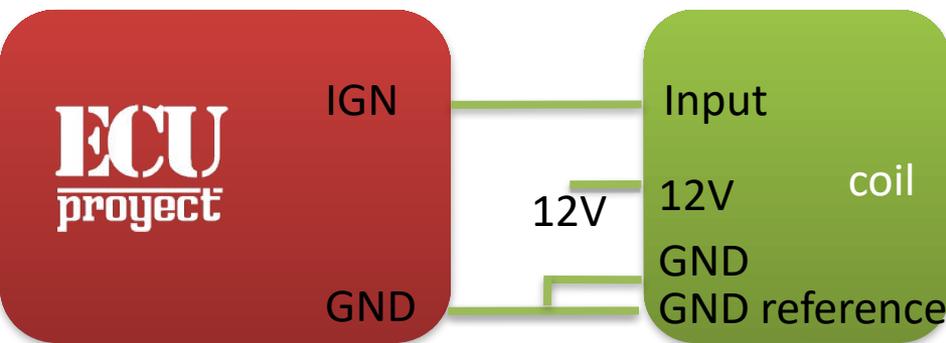


Injector connection

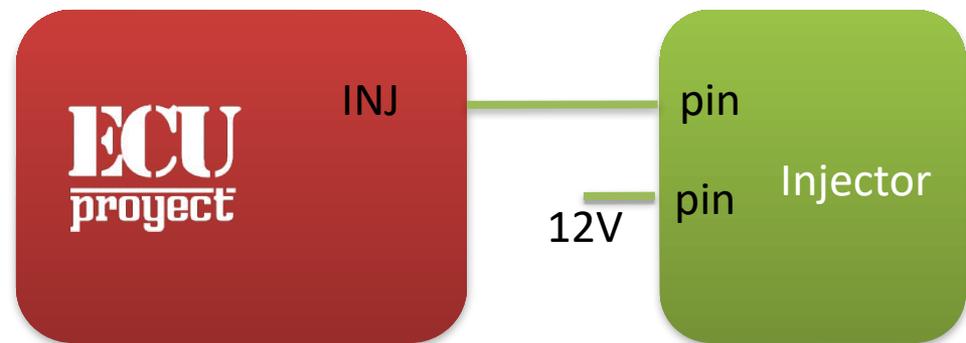


WIDEBAND connection (with gauge)




Narrowband O2 sensor connection

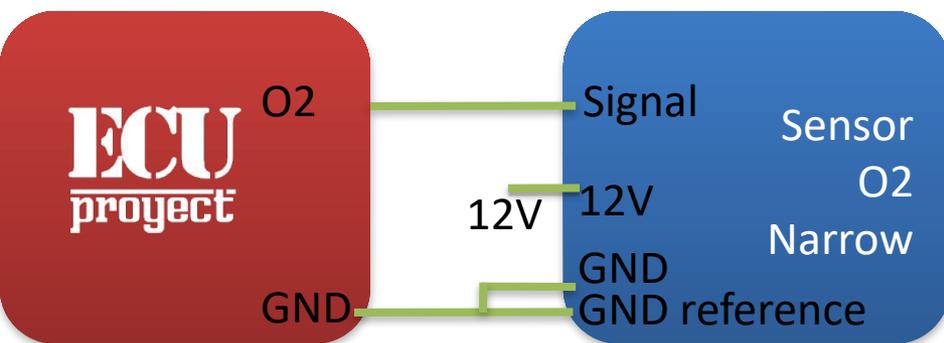


FP connection (with relay)

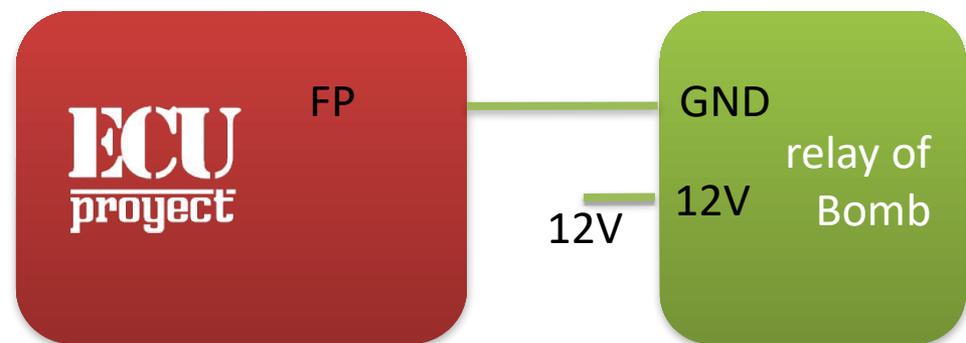


FlexFuel connection

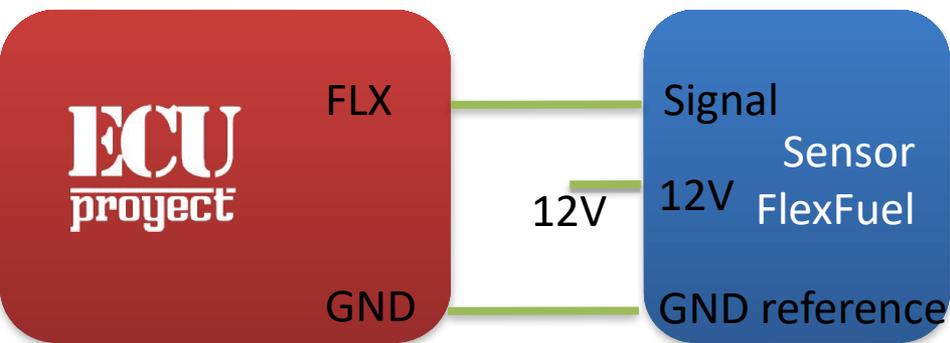


FAN connection (with relay)

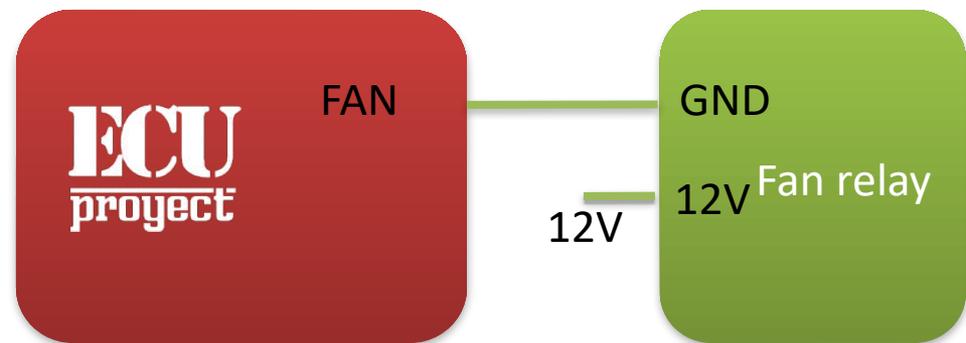

VR Type CKP Sensor Connection

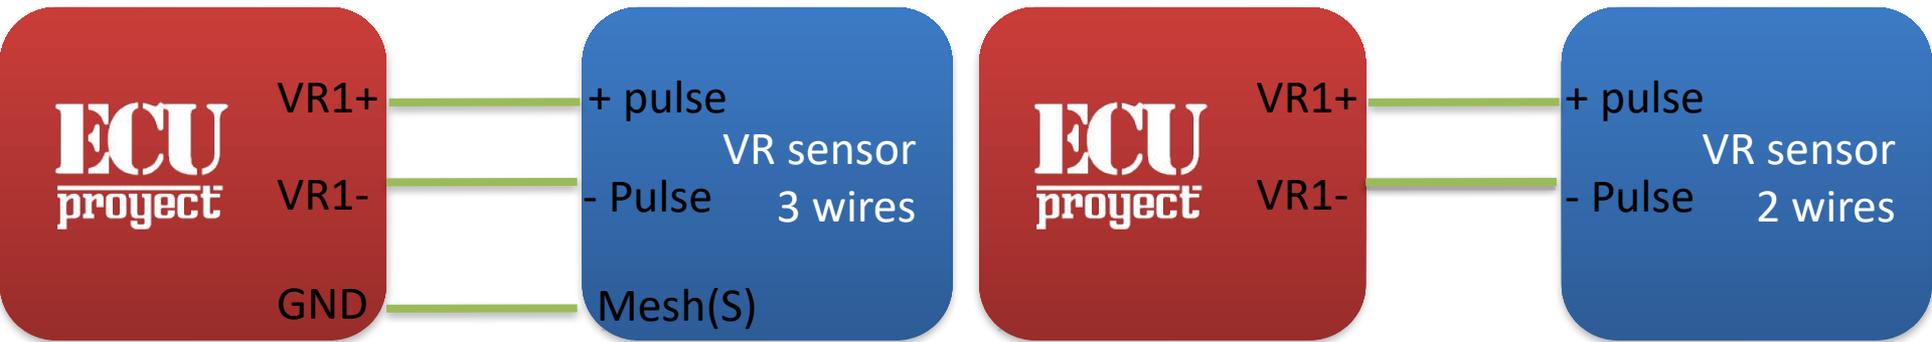


Hall/Optical CKP Sensor Connection

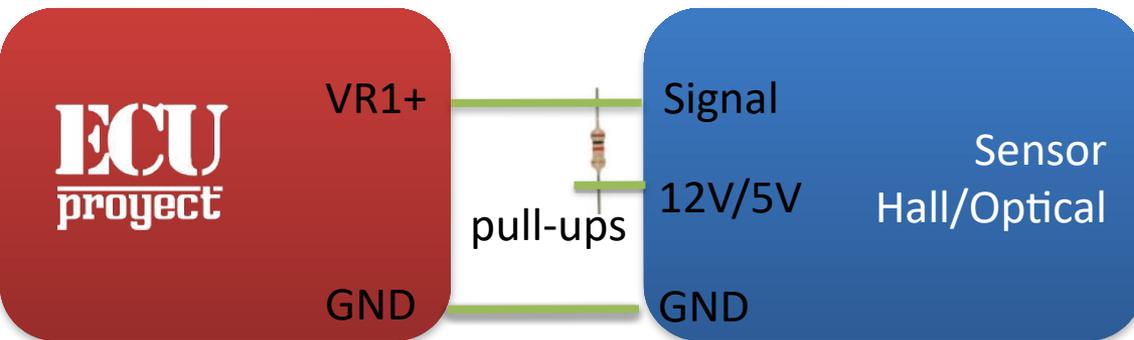

Pullup: Resistance from 1k to 10k. Not all Halls require Pullup (for example those of LS)

Tachometer Connection

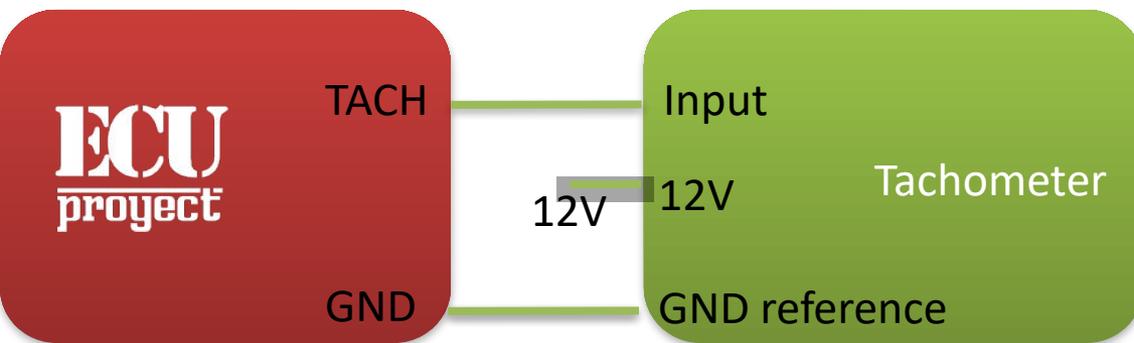


How to find the signals of my VR sensor

There are 2-wire and 3-wire VR sensors, in the case of the 2-wire ones it is easy to connect them, but for the 3-wire one there is confusion because we have a cable that has no signal and can cause failures.

To find which is the pair of signals, a multimeter is used to measure ohms.

Take a pair of pins and place the multimeter, if the resistance is infinite then we have that we are taking a signal pin and a mesh pin


We change pins until it gives us a resistance between 0.8k ohm to 1.5k ohm.

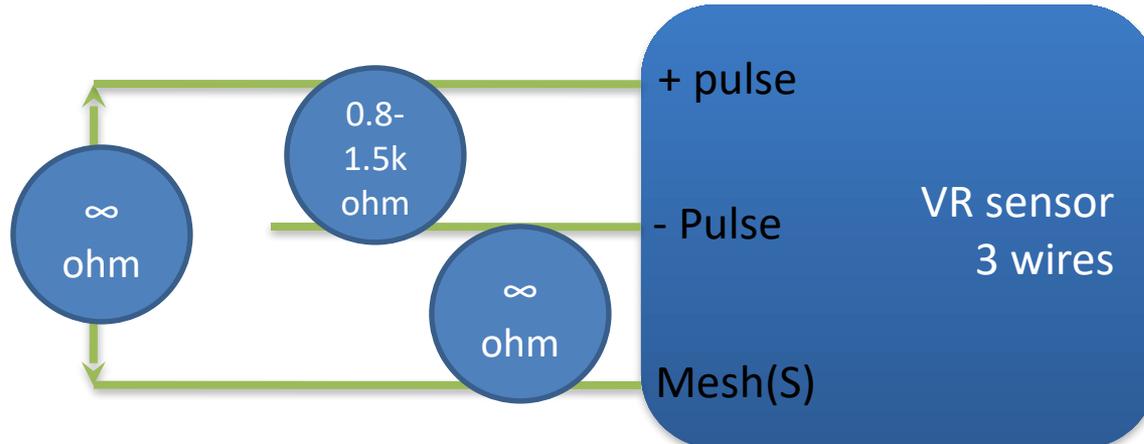

coil types


There are 2 types of coils, this small guide can indicate what type of coils we have.

In general it can be summed up that if the coil or coil pack has 12v and GND, it is a coil Smart, if it only has 12v OR GND (only one of the two) then it's Dumb coil.

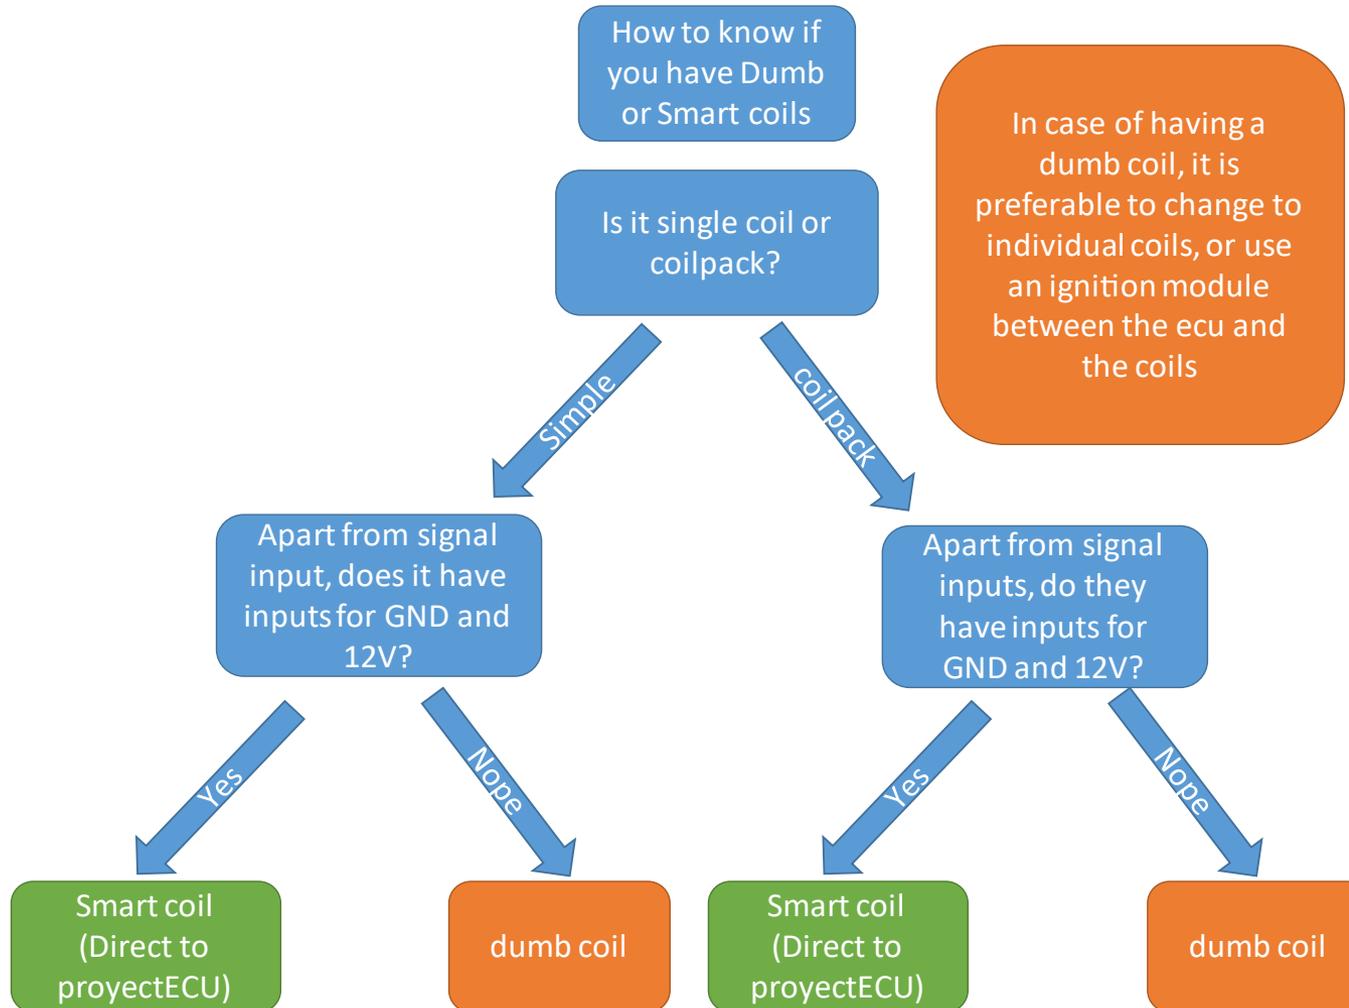

Ground Connection

The ground connection is VERY important, a bad connection can cause loss of communication with the ECU, sensors with voltage variation, or even damage to the wiring.

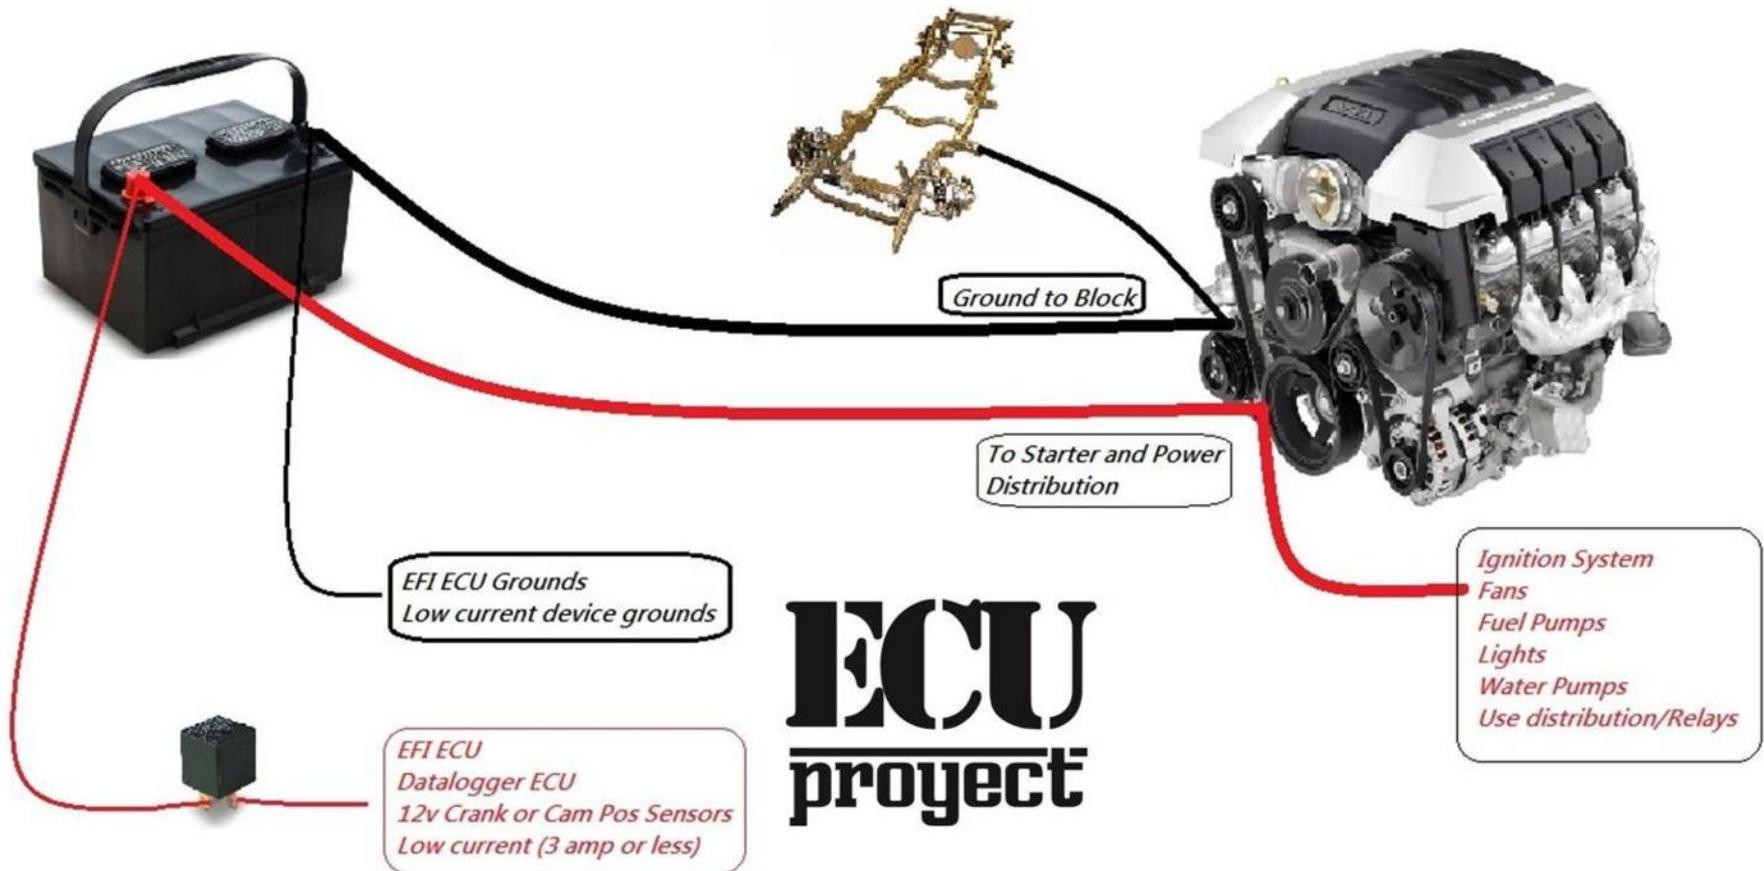

WB-connection

Wideband analog signal connection exists in 2 ways depending on your wideband kit, here we show 2 examples taking WB aem:



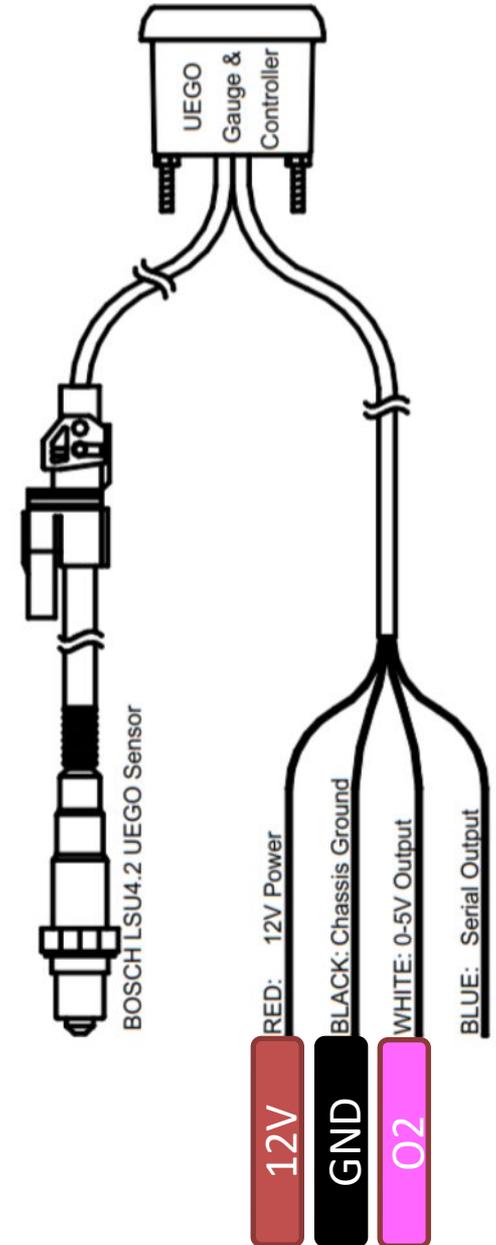


DIAGRAMA BASICO PROYECT ECU

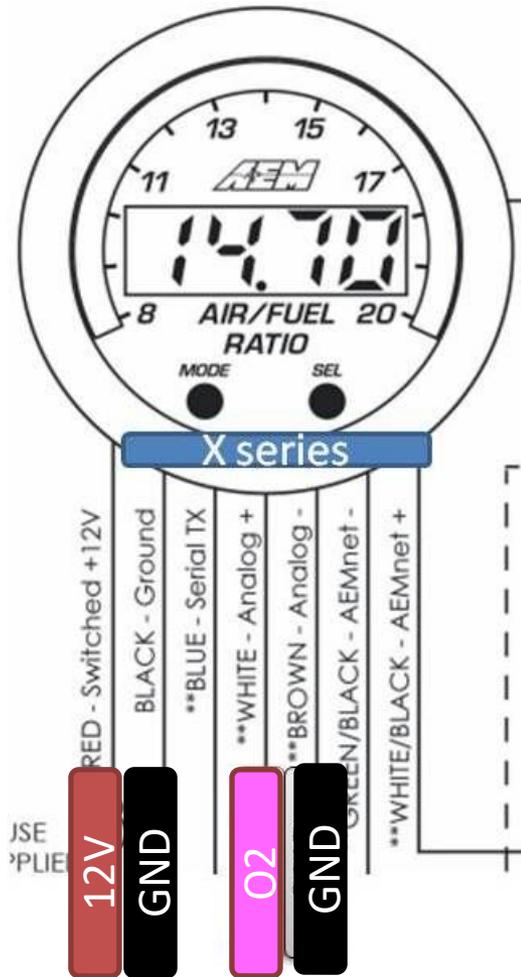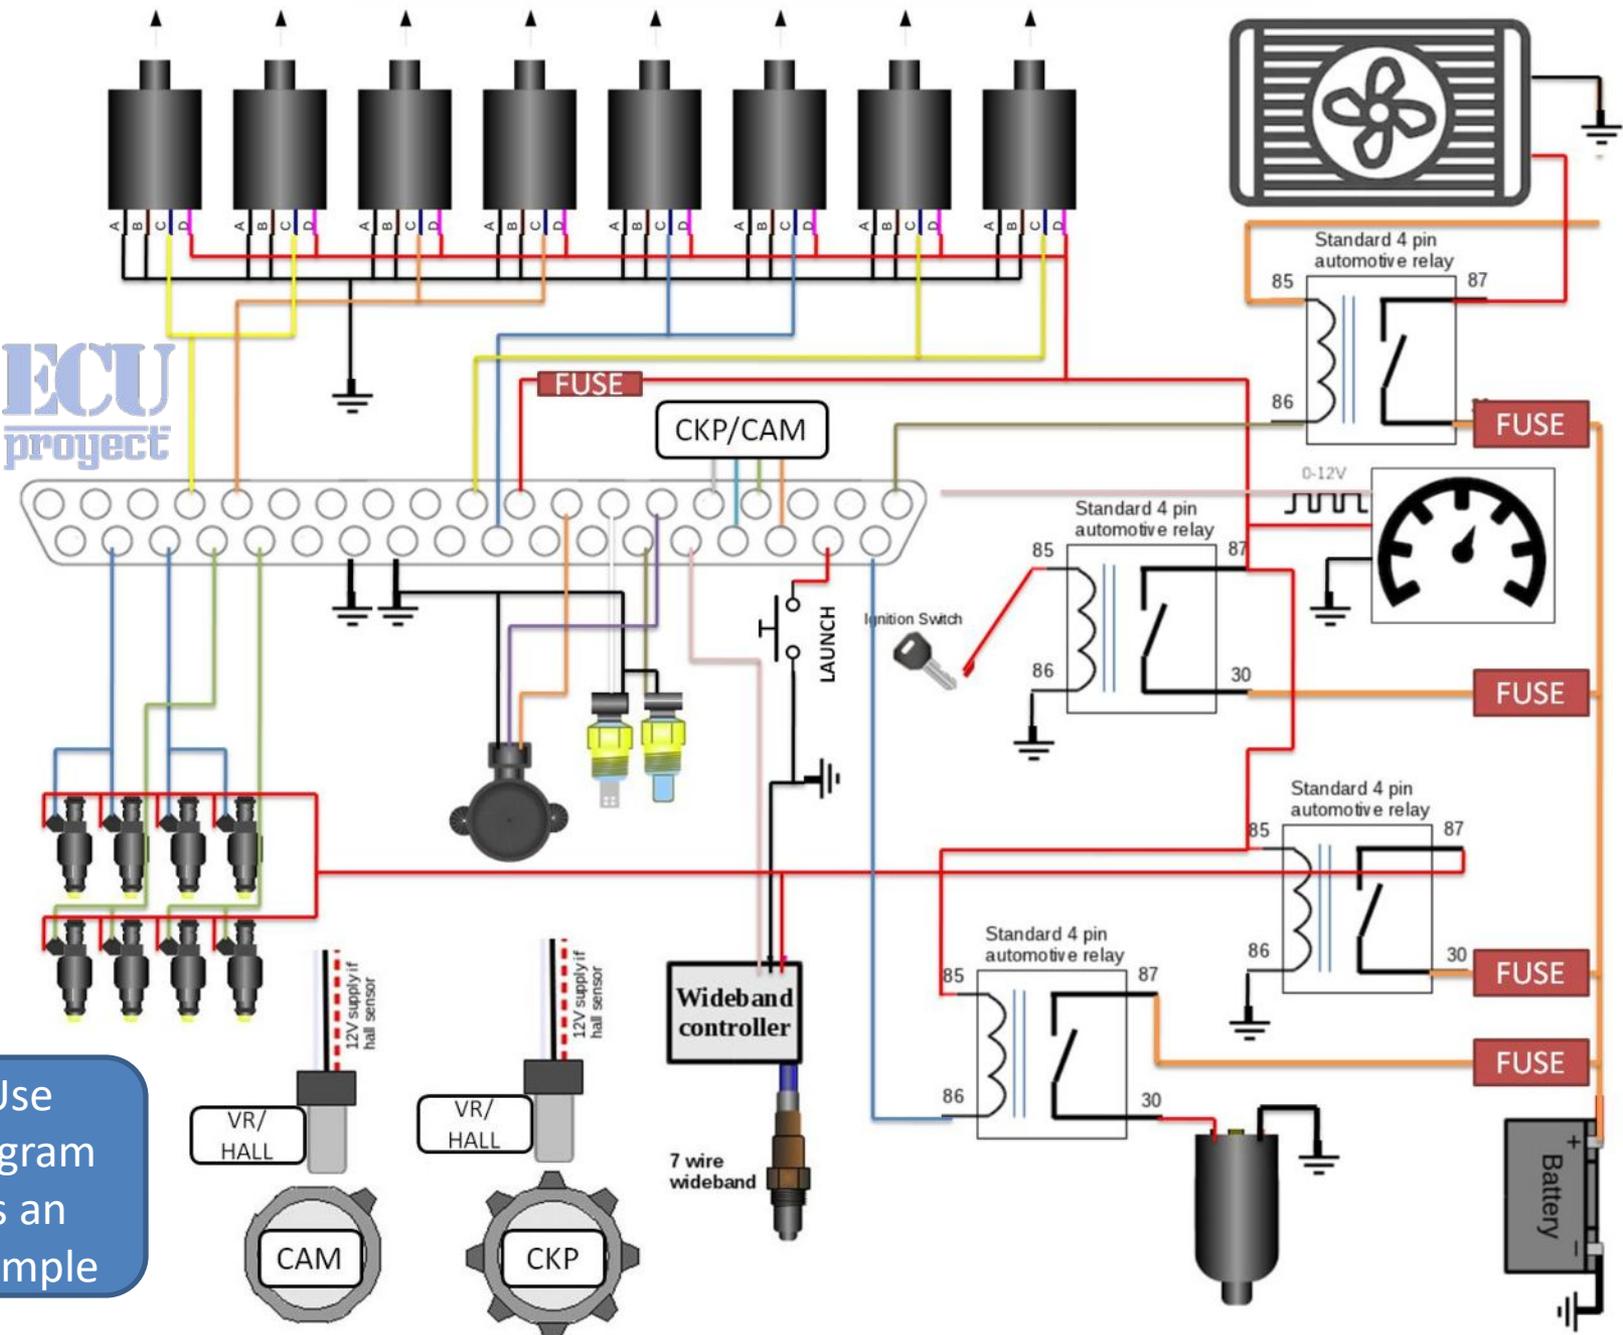

ECU project

Use diagram as an example

Bluetooth use (if available)

Power on the ECU

In the android device go to the bluetooth section, search and connect to the device "ProjectECU", the pin is: 1111

On the Android device go to the Play Store and search for "RealDash"

Install realdash APP

Once installed you have to open realdash and configure in your panel, Connections "ADD", Source "Speeduino", Type "Bluetooth", Bluetooth "ProjectECU", Settings "Serial 3" and DONE.

We can now enjoy data in Dash.



Available Video Tutorial:
ProjectECU.com/downloads

Tutorial how to connect to
ProjectECU Bluetooth from
cell/tablet

